







Green light:
the cutting
will stop if the
wire is
broken. Red
light: the
running will
not stop even
the wire is
broken

This is the direction
changing limit system,
please study it and do
not let the motor fly
out of the machine.

"0" is close the
power, "1" is for
cutting steel, "2"
is for cutting
Aluminum